

INFLATABLE TAKE DOWN INSTRUCTIONS

After removing all riders, unplug the INFLATABLE from the power source and remove the blower from the unit. Open Velcro flap and zipper to allow air to escape. **Do not remove the ties and anchors until all of the air has left the unit.**

When the unit is flat (fig.# 1), remove the ties holding the INFLATABLE in place.


Make two large folds from the sides bringing the outer sides to the middle, leaving a gap in the center of about a foot wide (fig.# 2).

Then fold the unit in half (fig.# 3).

Roll the unit from the front to back.

Make sure the blower tube is extended and the zipper is fully open so any remaining air will leave the unit.

When rolling from the front to back, try to get it as small as possible. Carefully "walking" the unit from front to back can help get the surplus air out you should only do this in fig.# 2 & 3.

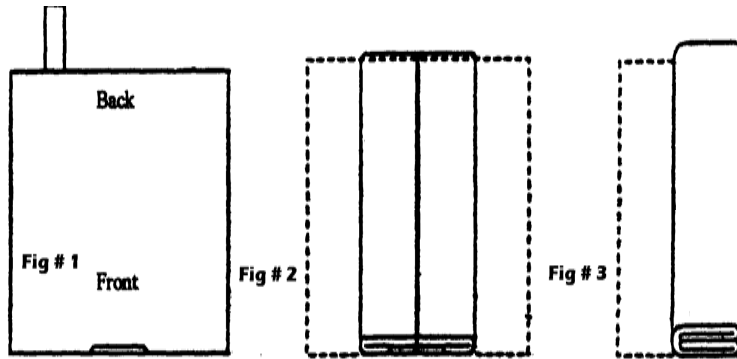

When finished rolling the unit, tie the bundle with the **tie strap** to handle easier.

Remove all anchors and ties from the area.

Inspect the area to make sure it is clear and that all parts of the INFLATABLE have been recovered.

INFLATABLE OPERATIONS MANUAL SET -UP INSTRUCTIONS

The INFLATABLE should be set up on a flat level surface, free of any debris or obstacles.

The best surface is a flat, grassy area.

An underlying tarp (under-liner or mat) is used at all times.

The unit IS NOT TO BE SET UP ON GRAVEL, BRICK OR ANY OTHER GRANULAR SURFACE.

This will cause excessive wear on the bottom of the unit and must be avoided.

- Make sure the INFLATABLE has **at least a two foot clearance** on all sides **5 feet is recommended.** Do not place the unit near fences, trees, house, walls etc. If the unit rubs against a fence or wall it **WILL** rub a hole in the unit.
- Make sure there is **adequate height clearance** for the INFLATABLE to inflate; **normally 14-16 feet.**
- Make sure the unit can inflate without touching tree limbs, overhangs, electrical wires, or any other obstructions.
- Unroll the unit.
- It should unroll from the back to the front.
 - When the unit is flat, position the front of the unit in the most convenient location.



At each bottom corner of the INFLATABLE are anchoring tabs. Attach these tabs to metal ground anchors or 75 pound bags. Do **not attach** the INFLATABLE to any movable object, **especially cars.**

All tabs MUST be anchored.

Jolly Jumps can turn over in high winds severely injuring occupants.


Deflate if wind speed exceeds 25 mph.



5025 RT. 8, GIBSONIA, PA 15044

724-444-7200

When staking INFLATABLES you will need to use a stake hammered in at an angle to secure each corner of the unit. Make sure the stakes are hammered firmly into the ground and there is no slack or play in the straps, they should be pulled snug. It is also a good idea to twist the stake around the strap once so that the strap does not slip out over the top of the stake.

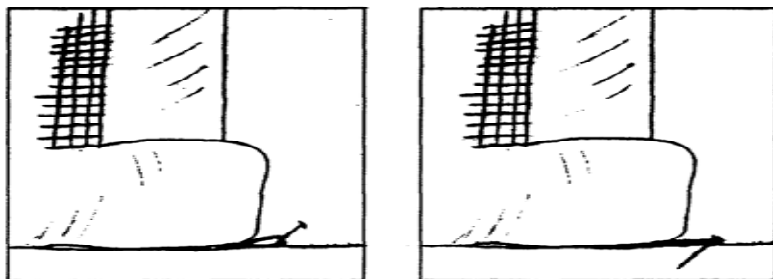

If you are setting up a Jolly Jump on cement you will need to layout your under liner before setting up. A 75# pound bag should be used on each corner of the unit. You will need to insert a 75# pound bag through the tabs **BEFORE INFLATING** the unit.

With the INFLATABLE securely anchored prepare to inflate the unit.

The blower cone needs to be inserted into the inflation tube at the rear of the INFLATABLE. Make sure the inflation tube strap is, secure around the back (small part) of the blower cone.

The zipper below the tube needs to be FULLY zipped and MUST be secured with the Velcro flap. Failure to secure zipper or flap will result in severe air leakage, loss of air pressure, and possible deflation and or damage to your unit.

Make sure the blower and extension cord do not come in contact with water. Do not run the extension cord under the Jolly Jump, and make sure it will not interfere with the operation of the unit.

INFLATABLE OPERATING INSTRUCTIONS

DO NOT OPERATE THE INFLATABLE IN WINDY (Above 25 MPH) OR UNFAVORABLE WEATHER CONDITONS. INFLATABLES CAN TURN OVER IN HIGH WINDS 25 mph AND ABOVE.

SEVERELY INJURING OCCUPANTS.

Make sure that the INFLATABLE is **fully inflated** before letting riders inside. Never allow riders on a **partially inflated** unit. All riders must remove their shoes empty their pockets of any hard objects that can injure themselves or others while jumping. Eyeglasses and jewelry should also be removed. This includes watches, bracelets, necklaces, etc..

Riders should all be of the same age group and should be limited to the maximum number of riders shown below. Never allow more riders in the unit than as shown. The unit must be supervised by a competent adult at all times.

CAPACITY: UNDER 5 YEARS 6-8YEAR OLDS 9-13 YEAR OLDS OLDER TEENS
& ABOUT THE SAME WEIGHT

13 x 13	(10)	(8)	(5)	(2)
15 x 15	(12)	(10)	(7)	(4)
15 x 17	(12)	(10)	(6)	(2)

In the event off severe weather **remove all riders from the unit and unplug immediately**. Make sure the. Unit remains securely anchored. Do not reinflate unit until adverse conditions cease. When conditions permit, inflate unit and allow it to dry before using again. Never allow playing on a wet unit.

If the INFLATABLE becomes **unplugged** or **loses power** during the operation, **the attendant should hold open the door and allow the riders to exit.**

There is no cause for alarm, riders should be told to remain calm and follow the attendant's instructions.

RULES

GENERAL RULES FOR SAFE OPERATION

- A. NO FLIPS
- B. NO ROUGH PLAY OR CLIMBING ON THE NET WALLS
- C. NO SHOES OR CAST LIMBS IN INFLATABLE
- D. NO SHARP OBJECT'S IN OR AROUND THE INFLATABLE
- E. NO FOOD, DRINKS OR GUM IN OR AROUND THE INFLATABLE
- F. **MUST BE SUPERVISED**
- G. CHILDREN OF THE SAME AGE GROUP MUST PLAY IN THE INFLATABLE AT THE SAME TIME. DO NOT MIX AGE GROUPS
- H. DO NOT EXCEED THE RECOMMENDED CAP ACITY
- I. NO EYEGLOSS OR JEWELRY
- J. NO SILLY STRING IN OR AROUND THE INFLATABLE