



Pole Tent Accessories		
Description	Size	Qty.
Side Poles	7'	10
Center Pole(s)	14'	2
Stakes	36"	16
Ratchet Buckles	2"	14
Sidewalls	30'	2
Sidewalls	20'	2

## 20' x 30' Pole Tent Installation Directions

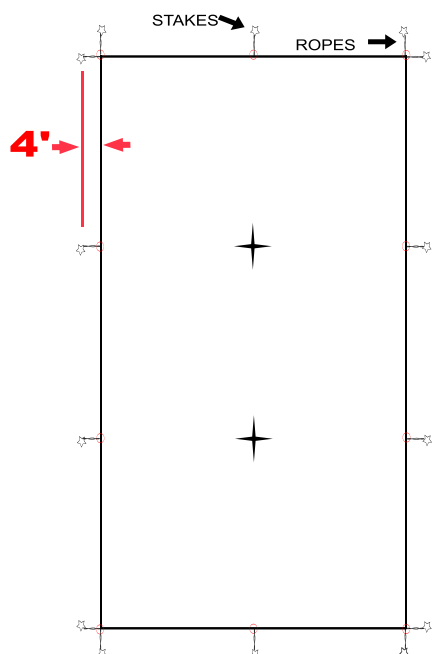

### You will receive

#### 16 Stakes

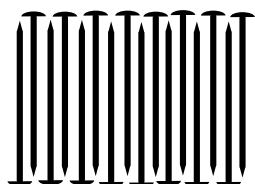

#### Pole Bag

#### Tent Top

1. Remove tent top from the bag.
2. Unroll and unfold the tent top on the desired spot to be covered. Keep the tent top as square as possible. Pull the perimeter of the tent as tight as possible, the center of the tent will not lay flat due to the peak of the tent
3. Stretch ropes straight out to their full length.
4. Layout all the hardware around the tent.
  - Place the stakes approximately 4' from the grommet locations
  - 2 stakes go to each corner location (place 90° apart)
  - 1 stake to the remaining grommet locations
  - Connect the 2 piece side pole and place 1 at each rope (only 1 at each corner)
5. Drive all of the stakes into the ground vertically until approximately 6" of the stake is left exposed.
6. Attach the ropes to the stakes at the corner locations.
  - Rope- use a Double Loop Clove Hitch Knot - grip the rope in your left hand approximately 8' down from the grommet, at this point, take your right hand and create a loop (approximately 6") with the excess rope and place it in your left hand. Repeat and create another loop and place on the side of the previous loop (should have 2 and half loops in your left hand). Take the right loop and pull it up and over so it is now on the left side. Now place both loops over the stake and pull tight with the excess rope. Repeat at all 8 corner locations.
7. The corner poles are now ready to be erected. Insert the pole pin through the metal "O" ring and the brass grommet (Very Important that the pin goes through both holes). Set the corner poles so that they are leaning in towards the tent at about a 60° - 75° angle. Repeat at all 4 corners. When all the corner poles are up in the air, a good portion of the weight has been lifted and easier access has been provided to the center of the tent.
8. Insert the center pole tip through the center "O" ring and brass grommet; make sure the pin is not caught on any part of the tent top. push the center pole into a vertical position.
9. Tighten all corner ropes until the corner poles are vertically straight up and down. The perimeter of the tent should be taut.
10. Straighten the center pole so it is setting vertical straight up and down. To do this corner ropes may need to be loosened.
11. At this point the tent top should be erect, with the corner poles and center pole vertically straight. The tent is now ready, for the remaining side poles to be added. Insert the pole pins, at each location, through the "O" ring and brass grommet and place the pole in a straight vertical position. Tighten the rope to secure the poles.
12. Last place a stake at the base of each center pole and attach the rope to the stake, this will keep wind from lifting the top from the center pole.



### You Supply Needed Tools

Sledge



Safety Glasses



**RENTAL TIME**  
GRC INC.  
5025 Rte. 8 Gibsonia Pa 15044  
724-444-7200